Nachttisch Uhr WIFI Kamera

Bedienungsanleitung





Size: 112x40x43mm



Overview:

This stylish designed tiny clock, time and local temperature info is auto-sync from internet once connected with Wi-Fi; The most important, it is integrated with a powerful 1080p smart invisible Wi-Fi camera comes with 6 meters powerful night vision.

First, it can be used for watching live streaming video day and night , or taking photo and video by APP in smart-phone remotely after Wi-Fi connected; Also, it supports Point to Point (P2P) function, easily connected for local live video without Wi-Fi.

Second, it also support motion detect alarm function, cycle recording and work when charging.

Usages: Nanny camera, Home/ Shop/ Office/ Warehouse surveillance camera.....

Warning : " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:

1 x Camera Unit 1 x 5V2A power adapter 1 x Micro SD Card Reader

1 x USB Cable 1 x User Manual

Product structure :



Camera
 Camera



(5) USB port (6) Micro SD card slot (7) ON/OFF Key (8) Reset Key (9) Power indicator (10) Wi-Fi indicator (11) Charging indicator

Clock part of Tiny Clock:

- S Time/Alarm set
- P Hour/Month set / 12 vs 24Hour
- P Minute/Day set / 12 vs 24Hour
 - Alarm on/off

C

Turn off/on display

Wi-Fi Camera Connection Setting

Step1: Download and install APP

Scan below QR code or search and download free APP named <TinyCam> in Apple APP store, Google play or Electronic market, and install it;

Tips: Please allow "TinyCam" to access your location while you are using the app(for syncing local weather info).





Step 2: Take off back cover and pull out the battery insulator ---> Insert micro SD card ---> Press back ON/OFF switch for 2 seconds , wait for 1 minute (Power indicator and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug power adapter for long time use.

Step 3:Connect Wi-Fi

 Open smartphone settings, search and connect the device's wireless signal named"HCAM......", wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.

***00	AT&T T 6:55 PM	4 94% 📥	AT&T	6:16 РМ Wi-Fi	L 🕈 🛡 🕏 69% 🔳
≻	Airplane Mode	\bigcirc			
Ŷ	Wi-Fi	aisales >	Wi-Fi		
*	Bluetooth	On >	HCAM-06258	82-YMWHG	? (i)
(r†1)	Cellular	2	CHOOSE A NETWOR	<	
ନ୍ତ	Personal Hotspot	>	360WiFi-1508	3	s 🗟 🕯
VPN	VPN	\bigcirc	aisales		e 🤋 🕕
			Office-WiFi		ê 🕈 🚺
			nj1522		s 🕈 🕕
			ChinaNet-icd	G	≜ ╤ (i)

ChinaNet-KX.IU

DRB8888

• ≎ () • ≎ () Enter APP, press right corner " Q" icon --> LAN search device--> Press Add --> Camera Online then;



Tips: 1.Please select 【Change】 to change device password for security 【default: 888888】;

2. This step = P2P mode, can check video locally when without Wi-Fi.

3.Press 🖏 icon on the right corner of camera —> WiFi Config —>Select local Wi-Fi (SSID) —> Input password —> Press Confirm;



····⊙ AT&T ♥ 6:21 PM Setting	L 🗸 🗑 🕇 69% 💼 -	•••• ATAT *	6:21 PM େମ ଅଟେ Wi-Fi Config	69% 💻
ID PPRT-06	2582-YMWHG >	SSID	aisales	>
Device Name	>	Password	Please input Wi-Fi pass	word >
Password	>	IP address	192.168.234.1	>
Share	>	Subnet mask	255.255.255.0	>
Wi-Fi Config	>	Gateway	192.168.234.1	>
Alarm Config	>	DNS	192.168.31.1	>
IO alarm Config	>			
Micro SD Card Config	>			
Change Password	>			
Other Config	>			
Remove device	ce)		Confirm	

 Quit APP , wait 30 seconds (device restart automatically)and connected with set Wi-Fi (Wi-Fi indicator flash regularly);
 Enter APP and check live video locally or remotely anywhere.

Set camera name and private code

Set name: Press the $< \$ after the camera, select Device name --> Input needed name or select sample names like Office... Set new password: Press the $< \$ after the camera, select Change Password --> Old password = 888888.

all中国移动 专	12:46 PM	L 🕈 🗑 🖇 49% 📃
<	Setting	
ID	PPRT-05	58568-WVBPF >
Device Name		×
Password		Σ
Share		Σ
Wi-Fi Config		2
Alarm Config		>
Micro SD Card	Config	>
Change Passw	vord	>
Other Config		Σ
	Domoun douir	-
	Nelliove Gevi	

Confirm

APP introduction:



Tips: 1. Please confirm phone setting has allowed TinyCam App to access the location services;

2. A TF card(Micro SD card) must be inserted for saving alerts pictures.



••••• AT&T 🗢 1	0:14 AM 🤇 🕂 🖉 🕏 73% 💼 🕇	
< s	etting	
ID	PPRT-062551-URWRZ >	
Device Name	>	
Password	>	
Share	1	
Wi-Fi Config	2	
Alarm Config	3	
Micro SD Card Conf	ig (4) >	
Change Password	(5) ×	
Other Config	6	
Remove device		

① Share camera with others by QR code
(2) Wi-Fi Config: Set camera to connect to local Wi-Fi
(3) Alarm Config: Set motion detection sensitivity /Alarm interval
(4) Micro SD Card Record Config: Set SD card record mode / Resolution /File length
(5) Change password: Set camera new password

6 Other Config: Time Config, Device reset, FTP or Mail setting...

Watch by PC in LAN network

Once camera connected well with Wi-Fi, press the \Im after the camera, Wi-Fi Config --> find out IP address --> Input this IP address info into browser.

User name: admin Password: your set password (default 888888)

Watch by PC remotely (WAN)

Once camera connected well with Wi-Fi,download PC driver from below QR code.

Input UID, User name: admin Password: your set password (default 888888) for checking live streaming video remotely.



Specification

Resolution	1 Mega CMOS
Video pixel in phone	Max 1920*1080
Video pixel in card	1080*720
Frames	Max 25fps
Compressed format	H.264
View angle	120 Degree
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	128GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above, chrome, firefox
Power consumption	300MA/3.7V
Battery Capacity	Rechargeable 3000 mA
Recording	1 minute/ around 20MB
Working time in day time	Around 8 hours
Working time in night time	Around 3 hours
Charging time	3-4 hours
Power adapter	5V / 2A

FAQ

- 1. Q: Time display is not stable, always blinking? A: It's with low battery, please charge it.
- Q: Can't get device Wi-Fi signal?
 A:Press reset key for 10 seconds and wait 1 minute.
- 3. Q: Live video not smooth and clear?

A: Select suitable resolution according to the real time network environment.

- 4. Q: Motion detect set and alarm?
 - A: 1). Set motion detect sensitivity in Alarm Config, and press right corner Confirm to save the setting;

2). When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 11 - Alert notification]. (A micro sd card MUST be inserted for saving alarm pictures)

- 5. Q: Micro SD card instruction?
 - A: 1). Format card before inserting;

 When backside switch is on, every time you insert micro SD card, it will record automatically;

3). Once connected, can set SD management in app

[Micro SD Card Record Config].

4). If Micro SD card detected and recording, the Wi-Fi indicator will flash slowly.

- 6. Q: How to play micro SD card video?
 - A: 1). Use a card reader to read and play;
 - 2). Use APP to play back [Page 11 TF card recorded files];
 - 3). Play back in good speed network.
- Q: Forget camera password, or item goes abnormal?
 A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
- Q: Any operation video demo of the camera for setting up?
 A: Please contact local dealer for video guide.



The end!