Powerbank WIFI Kamera

Bedienungsanleitung









Power Bank

Overview:

The wireless Wi-Fi security camera comes with HD 1080P high resolution camera for live video streaming worldwide from anywhere by smartphone APP TinyCam;

It is a functional power bank with two output USB port for charging. It also equipped with invisible night vision leds for day and night working around 4 meters.

Usages: Nanny camera, Home/ Shop/ Office/ Warehouse surveillance camera......


Warning: " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:

1 x Camera Unit 1 x 5V2A Power Adapter 1x USB Cable

1 x User Manual 1 x Card reader

Product structure of Power Bank

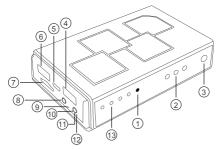

- Camera
- Night vision leds
- Light sensor
- Output USB port-1
- Input USB port

- Output USB port-2
- Micro SD card slot
 - ON/OFF Key
- Power indicator

- Wi-Fi indicator
- (11) Reset Key
- (12) Charging indicator
- Battery indicator

Wi-Fi Camera Connection Setting

Step1: Download and install APP

Scan below QR code or search and download free APP named <TinyCam> in Apple APP store, Google play or Electronic market, and install it:

Tips: Please allow "TinyCam" to access your location while you are using the app.






Step 2: Take off back cover --> Insert micro SD card --> Press back ON/OFF switch for 2 seconds , wait for 1 minute (Power indicator and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug power adapter for long time use.

Step 3:Connect Wi-Fi

1.Open smartphone settings, search and connect the device's wireless signal named"HCAM......", wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.

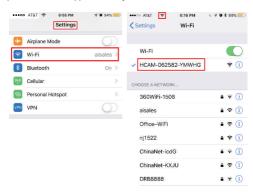

2. Enter APP, press right corner " Q " icon --> LAN search device --> Press Add --> Camera Online then:




Tips: 1.Please select 【Change】 to change device password for security 【default: 888888】:

2. This step = P2P mode, can check video locally when without Wi-Fi.

3.Press \bigcirc icon on the right corner of camera —> WiFi Config —>Select local Wi-Fi (SSID) —> Input password —> Press Confirm;



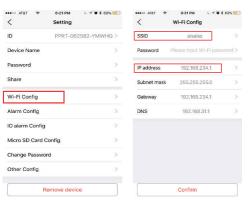

4.Quit APP, wait 30 seconds (device restart automatically)and connected with set Wi-Fi(Wi-Fi indicator flash regularly):

5.Enter APP and check live video locally or remotely anywhere.


Set camera name and private code

Set new password: Press the 🖏 after the camera, select Change Password --> Old password = 888888.







APP introduction:

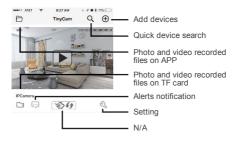

Tips: 1. Please confirm phone setting has allowed TinyCam App to access the location services:

2. A TF card(Micro SD card) must be inserted for saving alerts pictures.

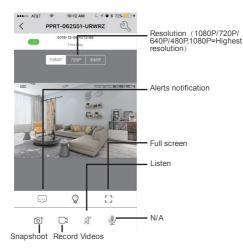

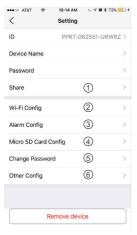

- Share camera with others by QR code
- Wi-Fi Config: Set camera to connect to local Wi-Fi
- 3 Alarm Config: Set motion detection sensitivity / Alarm interval
- Micro SD Card Record
 Config: Set SD card record
 mode / Resolution / File length...
- (5) Change password: Set camera new password
- 6 Other Config: Time Config, Device reset, FTP or Mail setting...

Watch by PC in LAN network

Once camera connected well with Wi-Fi, press the $\frac{Q}{N}$ after the camera, Wi-Fi Config --> find out IP address --> Input this IP address info into browser.

User name: admin Password: your set password (default 888888)

Watch by PC remotely (WAN)

Once camera connected well with Wi-Fi,download PC driver from below QR code. Input UID, User name: admin Password: your set password (default 888888) for checking live streaming video remotely.



[Download CD Driver]

Specification

Resolution	1 Mega CMOS
Video pixel in phone	Max 1920*1080
Video pixel in card	1080*720
Frames	Max 25fps
Compressed format	H.264
View angle	120 Degree
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	128GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above,chrome,firefox
Power consumption	300MA/3.7V
Battery Capacity	Rechargeable 5000 mA
Recording	1 minute/ around 20MB
Working time in day time	Around 8 hours
Working time in night time	Around 3 hours
Charging time	3-4 hours
Power adapter	5V / 2A

FAQ

1. Q: Can't get device Wi-Fi signal?

A:Press reset key for 10 seconds and wait 1 minute.

2. Q: Live video not smooth and clear?

A: Select suitable resolution according to the real time network environment.

3. Q: Motion detect set and alarm?

- A: 1). Set motion detect sensitivity in Alarm Config, and press right corner Confirm to save the setting;
 - When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 11 - Alert notification]. (A micro sd card MUST be inserted for saving alarm pictures)

- 4. Q: Micro SD card instruction?
 - A: 1). Format card before inserting;
 - When backside switch is on, every time you insert micro SD card, it will record automatically;
 - Once connected, can set SD management in app I Micro SD Card Record Config 1.
 - 4). If Micro SD card detected and recording, the Wi-Fi indicator will flash slowly.
 - 5. Q: How to play micro SD card video?
 - A: 1). Use a card reader to read and play;
 - 2). Use APP to play back [Page 10 TF card recorded files];
 - 3). Play back in good speed network.
 - 6. Q: Forget camera password, or item goes abnormal? A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
 - Q: Any operation video demo of the camera for setting up?
 A: Please contact local dealer for video guide.



The end!