
# WLAN Router Attrappe Kamera

Bedienungsanleitung

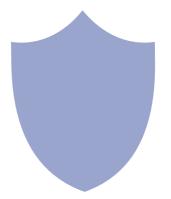



## Quick guide of Wi-Fi camera function:

- 1.Download Free App <TinyCam> from App Store or Google Play. Tips:Please allow "TinyCam" to access smartphone location while using the APP.
- 2.Insert micro SD card --> Plug in Power adapter , wait for 1 minute (Back power indicator is on and Wi-Fi indicator is solid green.); Tips: After above operation, please put on back cover and plug in power adapter for long time use.
- 3. Enter smartphone settings —> Search and connect device's Wi-Fi named: HCAM......,wait till phone status bar appear Wi-Fi symbol 🎅 ;
- 4.Enter APP, press right corner " Q " icon ---> LAN search device---> Press Add ---> Camera Online then:
- Tips: 1.Please select 【Change】 to change device password for security 【 default: 888888】:
  - 2. This step = P2P mode, can check video locally when without Wi-Fi.

5. Press ∜ icon on the right corner of camera —> WiFi Config —>Select local Wi-Fi (SSID) —> Input password —> Press Confirm;

Quit APP , wait 30 seconds (device restart automatically)and connected with set Wi-Fi;

 7.Enter APP to check live video locally or remotely anywhere. (Wi-Fi indicator flash regularly)

P.S.: Contact local dealer for tutorial video setting up.

### Overview:

This stylish dummy wireless router security camera is equipped with a high definition 1080P smart pinhole Wi-Fi camera, it comes with 6 meters powerful night vision for day and nigh live video streaming. Easy hidden and wide using make it a ideal security device for home/business surveillance.

Usages: Nanny camera, home/ shop/ office/ warehouse surveillance camera...

### Disclaimer:

The items are not be used for the purpose of illegal surveillance of unsuspecting subjects. The items are to be used only in compliance with all the local laws and regulations under the threat of penalty.


### In the box:

 
1 x Wi-Fi Camera 1 x User Manual 1 x Micro SD Card Reader 1 x USB cable

1 x Power adapter

3

### Product structure:

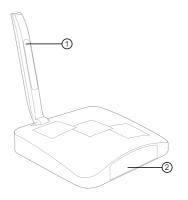



### Black box housing

Camera

- Micro SD card slot
- Invisible night vision led
   (Turn ON/OFF Automatically)
- Reset Key
   Power indicator

(3) USB port

(8) Wi-Fi indicator

Dummy net port

Solid=P2P mode, Flash regularly=Wi-Fi connected, Flash slowly=SD card recording

## Getting started of Wi-Fi camera part

Step1: Download and install APP

Scan below QR code or search and download free APP named <TinyCam> in Apple APP store, Google play or Electronic market, and install it:

Tips: Please allow "TinyCam" to access your location while you are using the APP.





Step 2: Insert micro SD card --> Plug in Power adapter , wait for 1 minute (Back power indicator is on and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug power adapter for long time use.

#### Step 3:Connect Wi-Fi

1.Open smartphone settings, search and connect the device's wireless signal named"HCAM......", wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.



#### 2.Enter APP, add devices(two ways):

 A. Device will be searched by APP within 3 seconds automatically, press confirm to add it;



B.Press right corner " Q " icon --> LAN search device—> Press Add —> Camera Online then: \*\*\*\*\* AT&T TinyCam Search Device The 1 device has been searched

Tips: 1.Please select 【Change】 to change device password for security 【default: 888888】;

2. This step = P2P mode, can check video locally when without Wi-Fi.

3.Press ♣ icon on the right corner of camera → WiFi Config
→Select local Wi-Fi (SSID) → Input password → Press Confirm;





- 4. Quit APP, wait 30 seconds (device restart automatically)and connected with set Wi-Fi; (Wi-Fi indicator flash regularly)
- 5.Enter APP and check live video locally or remotely anywhere.

### Set camera name and private code

Set name: Press the 2 after the camera, select Device name --> Input needed name or select sample names like Office...

Set new password: Press the <a> </a>, after the camera, select Change Password --> Old password = 888888.







### APP introduction:



Tips: A TF card(Micro SD card) must be inserted for saving alerts pictures.

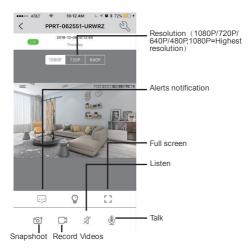

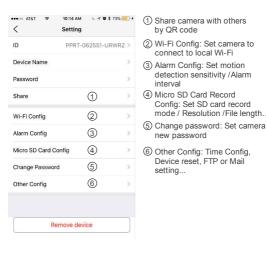

## Watch by PC in LAN network

Once camera connected well with Wi-Fi, press the \(\mathbb{Q}\) after the camera, Wi-Fi Config --> find out IP address --> Input this IP address info into browser.

User name: admin Password: your set password (default 888888)

### Watch by PC remotely (WAN)

Once camera connected well with Wi-Fi,download PC driver from below QR code.

Input UID, User name: admin Password: your set password (default 888888) for checking live streaming video remotely.



# Specification

i.	
Lens sensor	1 Mega CMOS
Video resolution in phone	Max 1920*1080
Video resolution in card	1080*720
Frames	Max 25fps
Compressed format	H.264
View angle	110 Degree
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	128GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above, chrome, fire fox
Power consumption	300MA/3.7V
Recording	1 minute/ around 20MB
Power adapter	5V / 2A

#### FAQ

- 1. Q: Can it working when charging for long time use?
  - A: Yes, please use included 5V 2A adapter to plug in power for long time use (Back charging indicator on, and off till fully charged).
- Q: Can't get device Wi-Fi signal? (Five solutions FYI).
  - A: 1). Please confirm the power adaptor connected;
    - 2). Take out battery, then plug in power and wait 1 min;
    - 3). Press reset key for 10 seconds and wait 1 min;
    - 4). Turn off camera backside, then turn on again;
    - 5). Turn off smartphone Wi-Fi for a while, then turn on to search again.
- 3. Q: Can't add or set camera after connected with camera Wi-Fi?
  - A: Please wait phone status bar appear Wi-Fi symbol, then to do follow settings.

- 4. Q: Why live video screen shows up black and a searching circle spins in center but nothing ever displays?
  - A: 1). If camera's connected Wi-Fi speed is slow, please wait 10-30 seconds for live video appear;
    - 2). Select top right 480p resolution to check.
- 5. Q: Live video not smooth and clear?
  - A: Select suitable resolution according to the real time network environment.
- Q: How many cameras can be added to APP?A: No limit.
- Q: How many visitors support to check live video?
   A: 1-4
- 8 Q: Motion detect set and alarm?
  - A: 1). Set motion detect sensitivity in Alarm Config, and press right corner Confirm to save the setting;
    - When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [ Page 14 - Alert notification ]. (A micro sd card MUST be inserted for saving alarm pictures)

- 9. Q: Micro SD card instruction?
  - A: 1). Format card before inserting;
    - 2). When backside switch is on, it will record automatically each time once micro SD card is inserted;
    - 3). Once connected, can set SD management in app [ Micro SD Card Record Config ].
    - 4). If Micro SD card detected and recording, the Wi-Fi indicator will flash slowly.
- 10. Q: How to play micro SD card video?
  - A: 1). Use a card reader to read and play;
    - Use APP to play back [ Page 13 TF card recorded files ];
    - Play back in good speed network.
- 11. Q: After connected to Wi-Fi, how is the status of camera when Wi-Fi off?
  - A: 1). If modem off, camera can still check local view as it is connected directly to wireless router:
    - 2). If both modem and router off, camera will keep searching the connected Wi-Fi and connect again:
    - 3). If above point 2, not connect; Just turn off and on backside switch again to connect Wi-Fi.

- 12. Q: Camera can't hold set Wi-Fi, lost contact and offline?
  - A: 1). Make sure camera inside the range of good Wi-Fi signal;
    - Low battery, check if power adapter connected properly for long time use.
    - Make sure your phone network(4G/Wi-Fi)work well in remote area when checking the camera:
  - Please try to add with another phone which with good network.
- 13. Q: Forget camera password, or item goes abnormal?
  - A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
- Q: App content similar but not exact same as in manual?
   A: App is always being optimized with better interface and functions.
- 15. Q: Any operation video demo of the camera for setting up?
  A: Please contact local dealer for video guide



The end!