



Bedienungsanleitung

- Wetterstation WIFI Kamera
- Nachtlampen WIFI Kamera

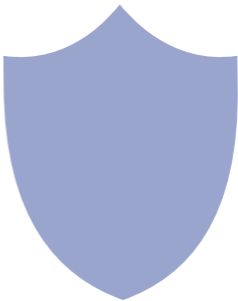



Wetterstation Kamera

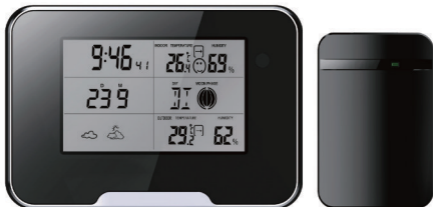



Wi-Fi Camera



Remote lamp



Nachtlampen WIFI Kamera

Overview:

This security Wi-Fi camera kit is equipped with a powerful 1080p smart Wi-Fi camera for live streaming video, and it comes with motion detection video recording and alarm.

Mini design and easy hidden to DIY any kinds of unique and exclusive security cameras for home & business surveillance.

Usages: Nanny camera, home/ shop/ office/ warehouse surveillance camera.....

Warning : " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:


Weather Clock

1 x Indoor unit 1 x Outdoor unit 1 x Back cover 1 x Card reader
1 x USB Cable 1 x User Manual 3 x Screws 1 x AC power adapter


Night Bulb

1 x Camera Unit 1 x User Manual 1 x Reset Pin
1 x Micro SD Card Reader

Product instruction

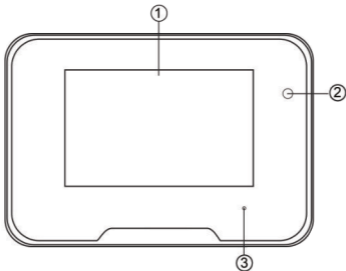

- ① 5" LCD screen
- ② Camera
- ③ Wi-Fi indicator light

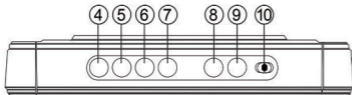

④ Time

⑤ Alarm


⑥ Up

⑦ Down

⑧ Max / Min

⑨ Alert

⑩ OFF/ON (For backlight)

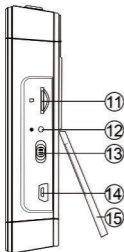


⑪ TF card slot

⑫ Reset key


⑬ ON/OFF (For Wi-Fi Camera)

⑭ USB port

⑮ Back cover

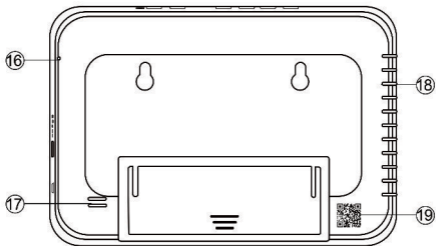

- ①⑥ Charging indicator light ①⑧ Heat dissipation hole
①⑦ Microphone ①⑨ UID & QR code

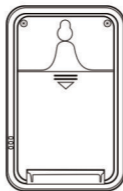

20 Indicator light



Getting Started of Weather station part

Open back cover, remove the protective seal from the battery and plug it into AC power using the included adapter; LCD screen will be lighted on.

Insert 2pcs*AAA batteries for outdoor unit, it will be powered on automatically and send out current actual weather info in 1 minute. Indoor unit will get and show this info on the indoor unit LCD screen.

- TIPS:**
1. Outdoor unit is NOT water or weather proof;
 2. Please power on outdoor unit within 3 minutes after indoor unit turned on; Or, indoor unit need to be totally restarted (plug off power and take out battery) for setting the connection of both units.
 3. Transmit distance between outdoor and indoor unit is about 40-50 meters when not any blocks.


- TIME:** Long press to set time/date
- ALM:** Long press to set alarm
- UP :** Up key(Press to change from 12 hour format time to 24 hour)
- DN :** Down key(Press to change from Centigrade degree to Fahrenheit)
- MAX/MIN:** Press to show the max or min temperature and humidity of the day
- ALERT:** Long press to set outdoor max/min temperature alarm
- ON/OFF:** Turn on/off the backlight

- TIPS:** 1. Outdoor unit is NOT water or weather proof;
2. Please power on outdoor unit within 3 minutes after indoor unit turned on; Or, indoor unit need to be totally restarted (plug off power and take out battery) for setting the connection of both units.
3. Transmit distance between outdoor and indoor unit is about 40-50 meters when not any blocks.

- TIME:** Long press to set time/date
- ALM:** Long press to set alarm

- UP :** Up key(Press to change from 12 hour format time to 24 hour)
- DN :** Down key(Press to change from Centigrade degree to Fahrenheit)
- MAX/MIN:** Press to show the max or min temperature and humidity of the day
- ALERT:** Long press to set outdoor max/min temperature alarm
- ON/OFF:** Turn on/off the backlight

Product instruction

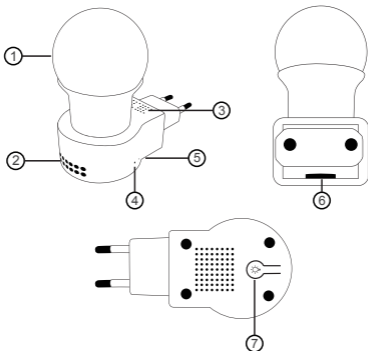

- ① Bulb ② Camera ③ Speaker ④ Reset ⑤ Indicator light
⑥ Micro SD card slot ⑦ Bulb on/off

Getting started of Wi-Fi camera part

Step1: Download and install APP


Search and download free APP named “HDSmartIPC” in Apple APP store, Google play or Electronic market, and install it.




HDSmartIPC



Step 2: Plug in power and turn switch to ON, wait for 1 minute;

Step 3: Connect WiFi


1. Open smartphone settings, search and connect the device's wireless signal named "AI/LM.....", wait Wi-Fi connected, and phone status bar appear Wi-Fi  symbol.


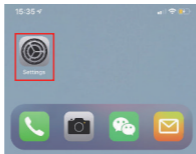


2. Enter APP, app will add just connected camera automatically, Camera Online then;

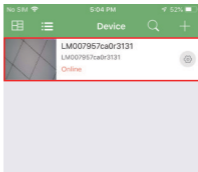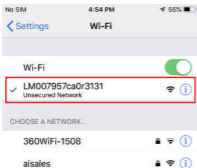


TIPS: This step = P2P mode, can check video locally when without Wi-Fi.


3. Press the gear icon  after the camera and select Other Config ,select Wi-Fi Config.

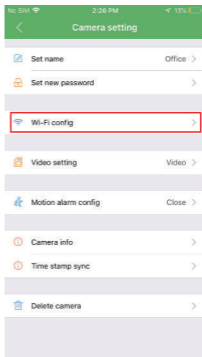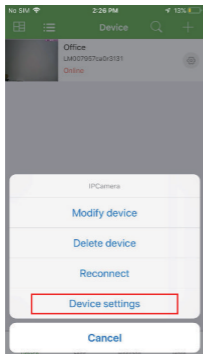



4. Select the router Wi-Fi and input password, camera will be connected to the router Wi-Fi. The smartphone will disconnect the signal from device and connect to the router Wi-Fi.
5. Quit APP, and device restart automatically and ready again in 30 seconds.
6. Enter APP and check live video locally or remotely anywhere.

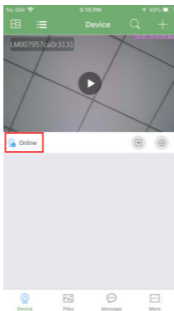


Set camera name and private code

Set name: Press the  after the camera, select Modify device, insert name like Office, Room.....


Set new password: Press the  after the camera and select Other Config ,select Change access code and change it to new one. Default one is 8888.

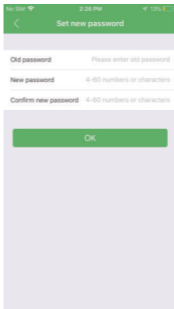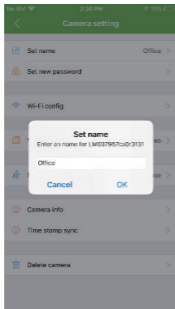


APP introduction:

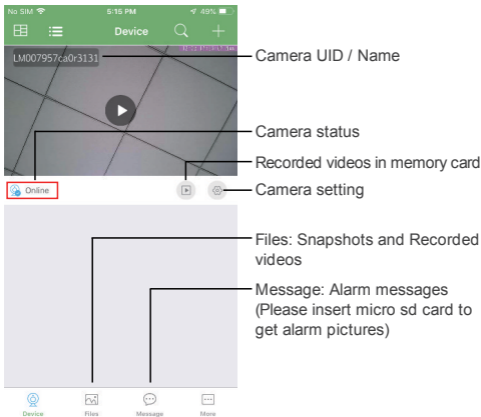

Live video page - Click camera to check

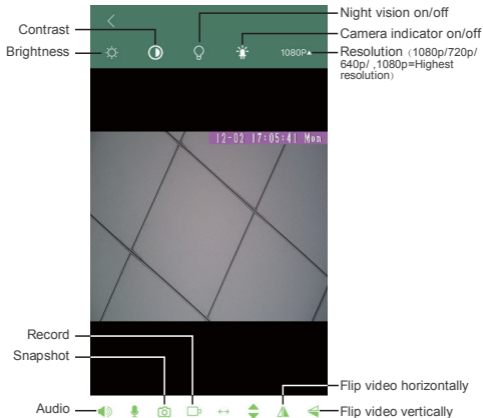

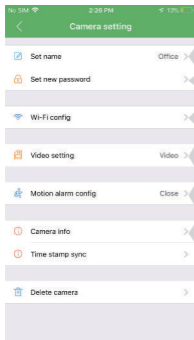

Set name: Set camera name like, Office. Living room. Kids room...

Set new password: Set camera new password

Wi-Fi config: Set camera to other Wi-Fi

Video setting: Set SD card record mode / Resolution / File length ...

Motion alarm config: Set motion detection sensitivity

Camera info: Camera ip address, Mac address, Reboot...

TIPS: Each setting in Device Settings, please scroll down and press ok to save the setting.

Set and watch by PC remotely (Windows Only)



Scan to download PC Client

Specification

Lens sensor	1.0/2.0 mega CMOS
Video resolution in phone	Max 1920 * 1080
Video resolution in card	Max 1080 * 720
Frames	Max 25fps
Compressed format	H.264
View angle	90°
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	128GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above,chrome,firefox
Power consumption	300MA/3.7V
Recording	1 minute/ around 20 MB
Power adapter	5V 2A

FAQ

1. Q: Can't get device Wi-Fi signal?

A: Press reset key for 10 seconds and wait 1 minute.

2. Q: Live video not smooth and clear?

A: Select suitable resolution according to the real time network environment.


3. Q: Motion detect set and alarm?

A: 1). Set motion detect sensitivity in Alarm Config;

2). When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 17 - Message]. (A micro sd card **MUST be inserted for saving alarm pictures**)

4. Q: How to play micro SD card video?

A: 1). Use a card reader to read and play;

2). Use APP to play back [Page 17 - ];

3). Play back in good speed network.

5. Q: Forget camera password, or item goes abnormal?
A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
6. Q: Any operation video demo of the camera for setting up?
A: Please contact local dealer for video guide.



The end!