Ultra Long Standby Wi-Fi Security Camera with Low Power Consumption

User Manual

Version: Jan, 2021







Tips: Default with 10mm diameter big lens; [Optional Conical Lens].

Overview:

The Ultra Long Standby WiFi Security Camera, it is builtwith high tech of super low power consumption 450μ A/hourto save energy for around half an year standby after being fully charged.

First, it can be used for watching live streaming video day and night (night vision around 5 meters), or taking photo and video by APP in smart-phoneremotely after WiFi connected;

Second, its PIR sensor will make precisely motiondetect recording for surveillance use (around 5 meters distance and 2 meters height). Also, it has cycle recording and work when charging.


Usages: Nanny camera, Home/Shop/Office/Warehouse surveillance camera.....

Warning : " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:

1 x Camera Unit 1 x Micro SD Card Reader 1 x USB Cable 1 x User Manual 1 x 2500mAhBattery (Default)

Product structure

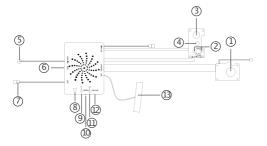

 ① Camera
 ② Invisible night vision leds
 ③ PIR sensor

 ④ Light sensor
 ⑤ Mic
 ⑥ USB port
 ⑦ Battery port

 ⑧ Micro SD card slot
 ⑨ WiFi indicator
 10 Reset key

 11 Charging indicator
 12 ON/OFF switch
 13 Antenna

Reset key tips:

One press to restart device;

4 seconds press to pair with WiFi (One beep sound); 6 seconds press to reset device (Two beep sounds).

Wi-Fi indicator tips:

Solid blue when pairing with WiFi; Turn off when WiFi paired; Blink once when motion detected.

Charging indicator tips:

Solid red when charging, and off when fully charged.

Wi-Fi Camera Connection Setting

Step1: CamSC APP

 Scan below QR code or search and download free APP named <CamSC>in Apple APP store, Google play or Electronic market, and install it;



APP:CamSC


 Open APP CamSC, select current region at the top right corner. Register with email, or third-partyaccount like Facebook or IOS account. (Tips: If a code doesn't arrive, please check the spam folder first.)



Step 2: Insert micro SD card —>Turn side ON/OFF switch (Wi-Fi indicator is solid blue.);

Step 3:Connect WiFi 1. Press Reset key 4 seconds till a beep sound(WiFi indicator blink slowly and ready for pairing WiFi);

2. Open APP CamSC >>Click +>>Smart Home >>Device in pairing mode >>CAM-xxxxxx.

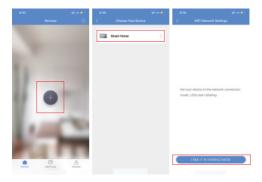

3. Click > at the end of WiFi to select the local router WiFi, then input password.

Click NEXT and wait around 10 seconds to finish the configuring; Device Binding Successful and online now.

0.00	15.40 BC	0.29		
 Will Network Settings 		<	Will Network Settings	
Please select a device for network		Device Nat	THE Smart Plana	
comection		WFt		>
CAM-A2F532		Passworth	inter the WFi password	0
		Please : connect	elect the WFR that you ner	10
			NEXT	

4. Click OinAPPSfirstinterface, select Time Zone and choose Time Zone to ensure live streaming video with the set time zone.

		15 40 B C	10:09	
		۲	< 54	
• 0 me			Device Name	Smart Home >
			Wi-Fi Config	aishinet)
			Time Zone	GMT+8 >
	•		Motion Config	
			Record Config	
			Notifications	0
Smart Home		© گ	Offline Notification	
			Micro SD Card Config	
			Firmware Version	WFI:22.21 D5P-3.9 >
			Remove Device	
		A		
Devices	Alerving	Account		

Camera Normal Status:

1. Camera always in standby mode;

 Once motion detected, it will push a notification to phone, do a snapshoot and record a 15 seconds video clip into memory card;
 Sleep and alert after 1 minuteonce motion detected again.


Set name: Press the (2) after the camera, select Device Name -->Input needed name like Office, Living room etc...

10-08	- T -
< Series	
Device Name	Swart Home >
WH/T Centig	abilitat 2
Time Zone	01/7+8 >
Motion Config	
Record Config	
NotTcalors	
Office NetRication	 C)
Mere SD-Card Corlig	
Firmum Version	WF1222106P329)
Remove Device	

APP Introduction





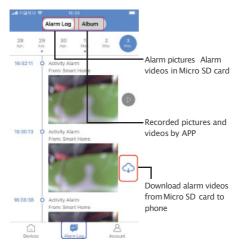

6-41	15 40 1 0	10:35 /	rt. 🕈 IC
		Austar	9
ap_zFyjqx9P	NF3gaw7Ce	Account ID	ap_zFyjqx8PNF3gaw7Ce >
8 Friends		Email	
1 Share		My QR Code	88 >
Freedback About Sign	Out	Add frien	infoand QR code ds by imput accou an QR code
		Sharing s	etting
0.6			
	Tag Account		

	Settings
Device Name	Smart Home >
Wi-Fi Config	aishine1 >
Time Zone	GMT+B >
Motion Config	
Record Config	>
Notifications	
Offline Notification	n 💽
Micro SD Card Co	nfig >4
Firmware Version	WF122.21 DSP-3.9 >
Remove Device	

Specification

2 Mega CMOS
5
1920*1080
Max 25fps
H.264
145 Degree
TF card>=Class 4/10 and HC marked
64GB
Android/iOS
2.4G and Mobile hotspot
Yes
15days
500µA
400mAh
640mAh
1 minute/ around 24MB
Around 90days
Around half an year
Around 6 hours
5V / 2A

FAQ

- Is device with offline and low power notification? Yes.
- What does the device do when WiFi off? Keep searching WiFi signal 3mins, 10mins, 1hour, 2 hours, Shours,24hourslater; If WiFi on, it will be connected to WiFi automatically.



The end!